


Реакции опор:

$$\sum F_z = 0 = -Z_B \Rightarrow Z_B = 0$$

$$\sum F_y = 0 = Y_B$$


$$\sum M_B = 0 = -M + M_{RB} \Rightarrow M_{RB} = M$$

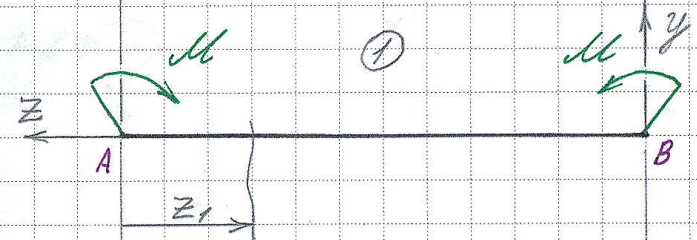

Резы:

$$\sum F_{y1} = 0 = -Q_{y1} \Rightarrow Q_{y1} = 0$$

$$\sum M_{K1} = 0 = -M + M_{x1} \Rightarrow M_{x1} = M$$

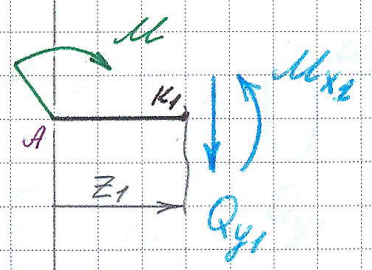

$Q=0$ - нагрузка отсутствует

